



Downloading data from wireless loggers through TQS v6


1. Select the Wireless Logger button

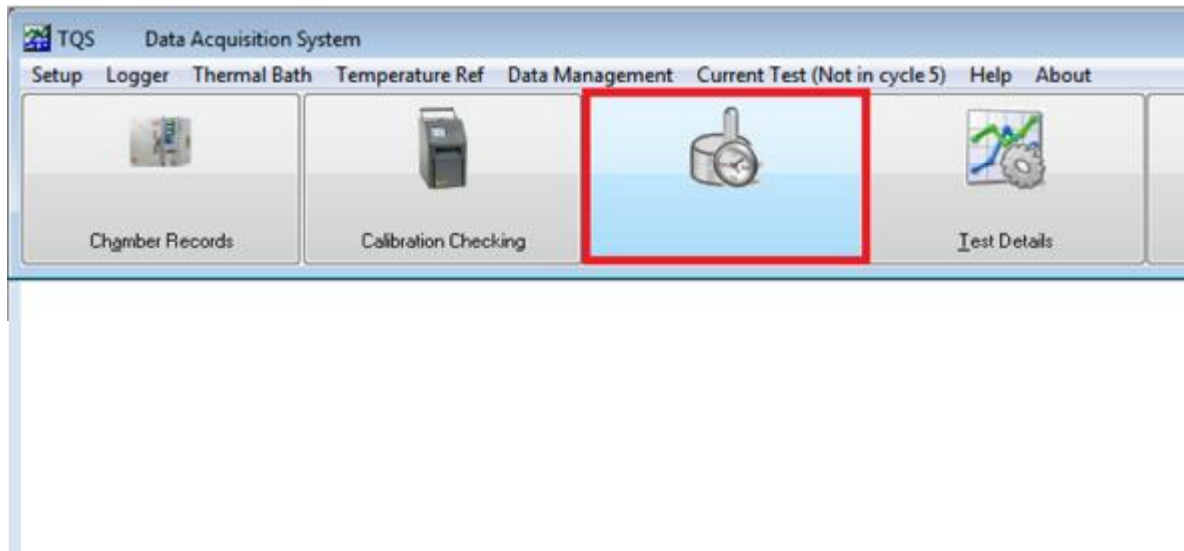


2. Select 'Download Tests'

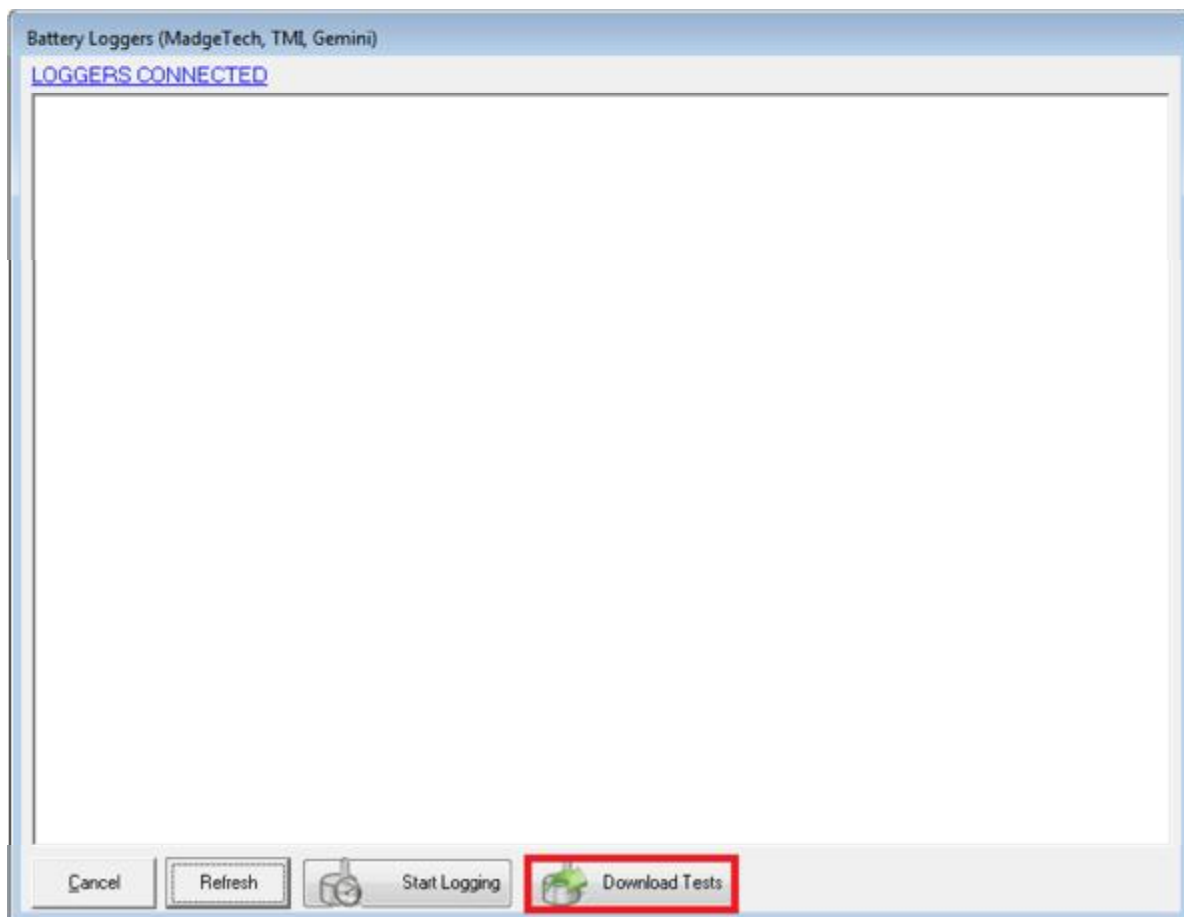


- Highlight the test you wish to download. This will also show you which loggers have been allocated to this test. If you have started multiple tests with different loggers, these will all show on the left column. Click 'Next'

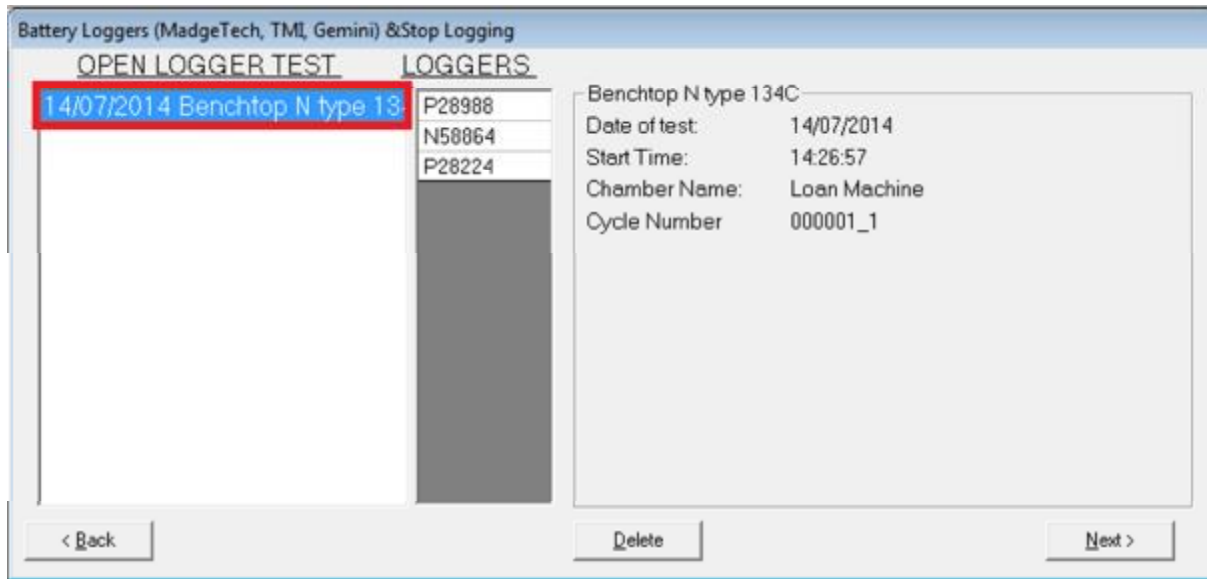

- Highlight the connected logger (shown in bold type), and select 'Download'

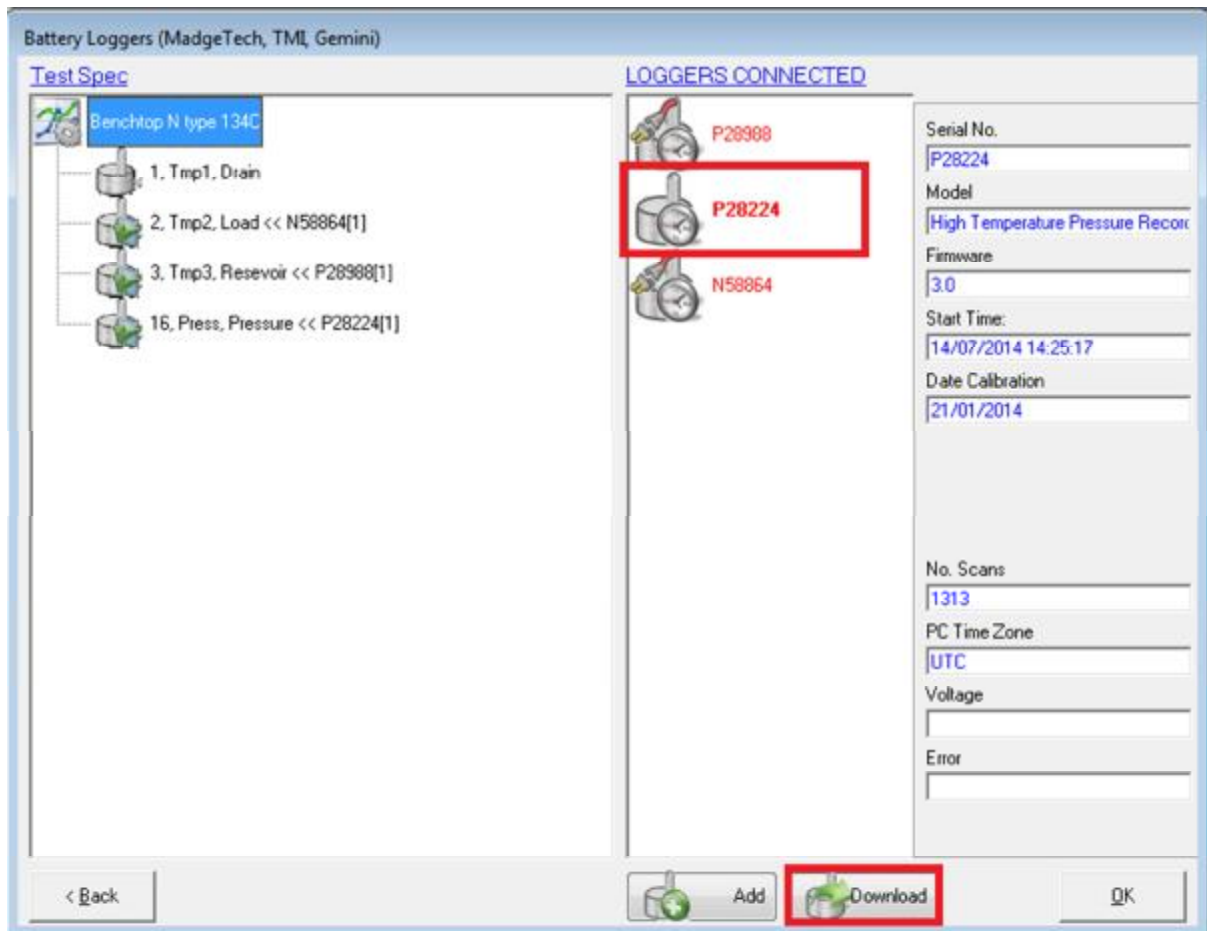

- Change the logger in the USB cradle and repeat the process until all loggers show the green 'Downloaded' arrow, then press 'OK' to collate the data from all loggers.

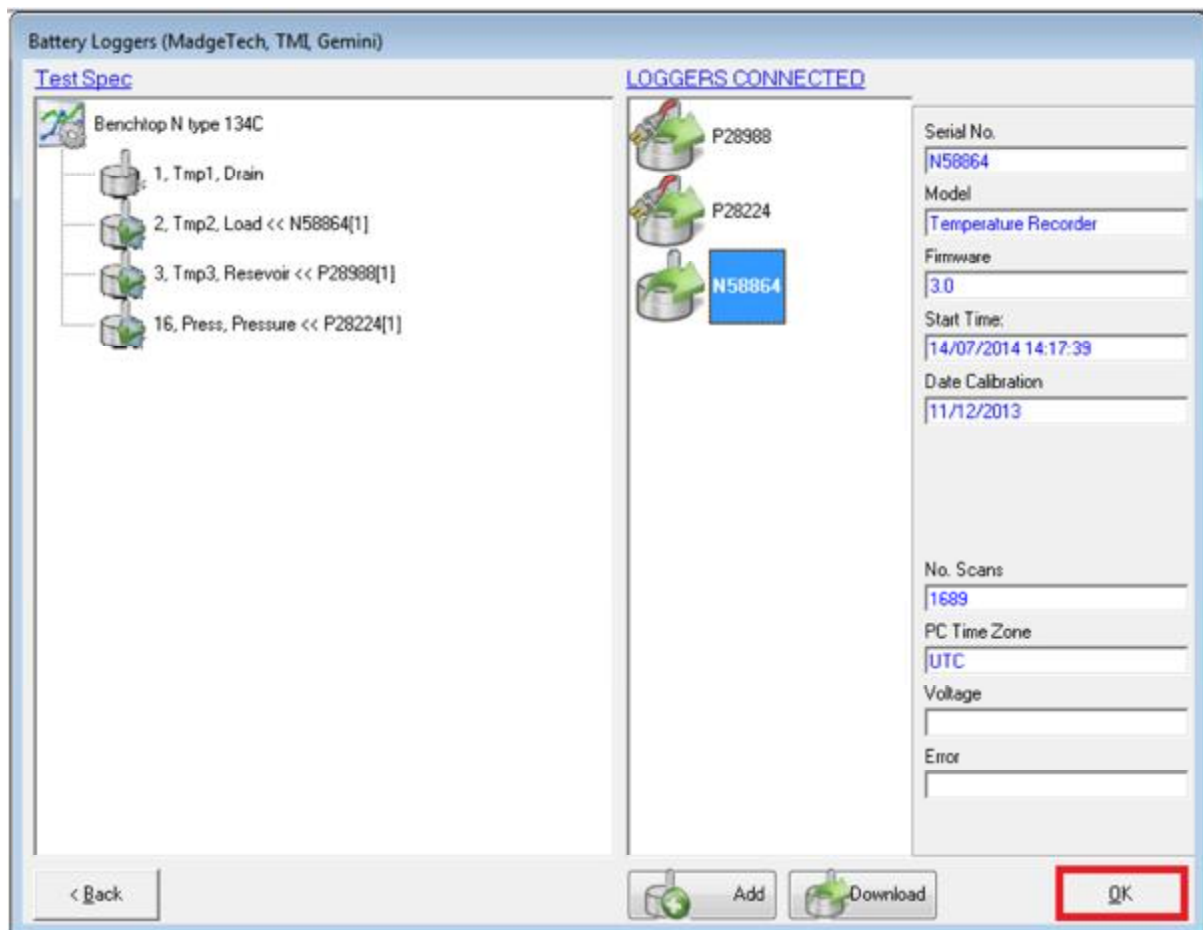

6. You can now display the chart or datalist in TQSoft by selecting the 'Chart Display' or 'Data Listing' button as normal, and enter any required stage lines using the 'Enter Stage' button.